



# VD53/MR33 - SETTING THE TIME AND DATE

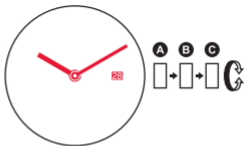

1. A - Normal position
2. Crown out to B position
3. Turn the crown clockwise until the preview days date appears  
*(If the date is set between around 9PM and 1AM. the date may not change on the following day. If it is necessary to set the date during that time period, first change the time to any time outside it, set the date and then reset the correct time)*
4. Pull out the crown to C position when the second hand is at the 12 o'clock. It will stop on the spot. Set the hands to the desired time of the day by turning the crown  
*(When the crown is at (C) position, do not press any button. Otherwise the chronograph hands will move)*
5. Push back to A position

# VD53/VR33 - CHRONOGRAPH

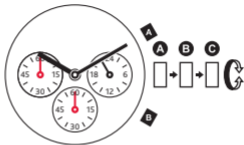

1. The chronograph can be started and stopped each time Button A is pressed
2. Pressing Button B resets the chronograph, chronograph second hand, chronograph minute hand and chronograph hour hand return to zero position

## **CHRONOGRAPH RESET**

1. A - Normal position
2. Crown out to the C position
3. Press Button A or Button B to reset all chronograph hands to zero position, the hands move quickly if the respective buttons are kept pressed
4. Once the hand have been zeroed, return the crown to A normal position.